

# **PB 2017-002 Tank Devices: Tank Level Not Changing when the "Update PIPE-FLO Model" Checkbox is Unchecked**

**Bulletin #:** 2017-002

**Date:** 08-15-2017

**Category:** 1

**Program affected:** PIPE-FLO® Overtime

**Build numbers affected:** 16.0.40080

**Approved by:** SKP

## **Background**

When running a PIPE-FLO Overtime simulation, if the checkbox for "Update PIPE-FLO Model" becomes unchecked either before or during a simulation, the tanks will appear open but will not empty/fill causing the calculations to be incorrect.

## **Workaround**

The current work around is to not uncheck the "Update PIPE-FLO Model" check box before or while the PIPE-FLO Overtime Simulation is running.

## **Resolution**

This was resolved in the PIPE-FLO® Professional 16.1.